



Transport
EFFICIENCY

"Running Well for You"

TECHNICAL BULLETIN

12-02b


Disassembling Wira fittings



Unscrew the Push in Unit from the fitting
The Push in Unit will rotate on the pipe without damage.

Using a small pick (preferably a needle) remove the "O" ring at the base of the threads in the Push in Unit.

Slide the cap back up the pipe and remove the pipe support. Cut the pipe directly behind the pipe grip and push the pipe grip off the pipe

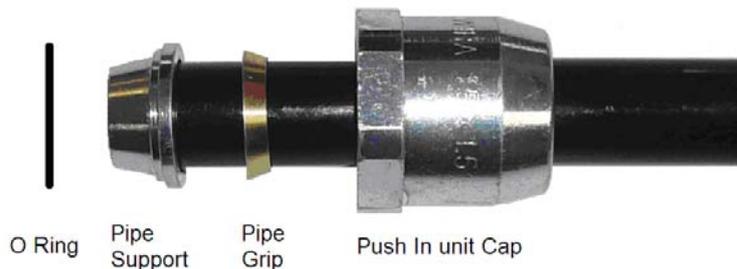

After inspecting the parts drop the pipe grip into the Push in Unit Cap with the taper facing the back of the Cap.

Place the Pipe support into the nut and refit the O ring, pushing it down with a smooth edge.

A puncture in the O ring will not cause a sealing problem.

Screw the Push in Unit onto the fitting and tighten to the appropriate torque.

8mm	17Nm
10mm	22Nm
12mm	30Nm
15mm	36Nm

Insert the pipe as per Assembly instructions 12-02a